

**BMW V11.40** Diagnostics List (Note: For reference on

Series	Year	Chassis	Department	SyStem	Function
2003 - 2012	E81/E82/E87/E88	Drive	CAS / FEM	CDV	
				DME / DDE	CDV
				EGS / SMG	CDV
				EKPS	CDV
				GWS	CDV
			Chassis	ABS / ACS / DSC	CDV
				AL / AFS / ASA	CDV
				RDC	CDV
				EPS	CDV
				SGM-ZGM / KGM / JBE /	CDV
			Body	SRS / SIM / MRS / ACSM	CDV
				CVM / CTM	CDV
				CA	CDV
				TCU / ULF / Tel	CDV
				AMP / AMPH / AMPT	CDV
		NAV		CDV	
		CDC		CDV	
		CCC-ASK		CDV	
		DWA		CDV	
		RLS / RLSS		CDV	
		ANT		CDV	
		SINE		CDV	
		SDARS		CDV	
		ULF-SBX-H		CDV	
		FZD		CDV	
		DAB		CDV	
		INSTR		CDV	
		PDC		CDV	
		CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV		
		CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV		
		CON / ZBE	CDV		
		SMFA	CDV		
		SMBF	CDV		
LM					
AHM	CDV				
FRM	CDV				
CID	CDV				
IHKA / IHKR	CDV				
CCC-A	CDV				
	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

1 Series	2010 -	F20	Drive	DME / DDE	CDV
				DME2	CDV
				EGS / SMG	CDV
				EKPS	CDV
				GWS	CDV
			Chassis	ABS / ACS / DSC	CDV
				ICM	CDV
				EMF	CDV
				EPS	CDV
				ICMV	CDV
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TR SVC	CDV
				AMP / AMPH / AMPT	CDV
				FZD	CDV
				KAFAS	CDV
				FLA	CDV
				INSTR	CDV
				PDC	CDV
				CBX-ECALL	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
				CON / ZBE	CDV
				SMFAH	CDV
				SMBFH	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				VDC	CDV
				IHKA / IHKR	CDV
				FKA	CDV
PMA	CDV				
ZGW	CDV				
ASD	CDV				
TBX	CDV				
STML	CDV				
STMR	CDV				
LHML	CDV				
LHMR	CDV				
GZAL	CDV				
GZAR	CDV				
CAS / FEM	CDV				
DME / DDE	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

2 Series	2013 -	F22	Drive	DME2	CDV
				EGS / SMG	CDV
				EKPS	CDV
				GWS	CDV
			Chassis	ABS / ACS / DSC	CDV
				ICM	CDV
				EMF	CDV
				EPS	CDV
				ICMV	CDV
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TR SVC	CDV
				AMP / AMPH / AMPT	CDV
				FZD	CDV
				KAFAS	CDV
				FLA	CDV
				IKE / KOM / KOMBI	CDV
				PDC	CDV
				CBX-ECALL	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
				CON / ZBE	CDV
				SMFAH	CDV
				SMBFH	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				VDC	CDV
				IHKA / IHKR	CDV
				FKA	CDV
PMA	CDV				
ZGW	CDV				
ASD	CDV				
TBX	CDV				
STML	CDV				
STMR	CDV				
LHML	CDV				
LHMR	CDV				
GZAL	CDV				
GZAR	CDV				
Drive	EWS	CDV			
	DME / DDE	CDV			
	EGS / SMG	CDV			

**BMW V11.40** Diagnostics List (Note: For reference on

1990-2000	E36	Chassis	ABS / ACS / DSC	CDV
			EHC	CDV
			LEW	
		Body	ZKE	CDV
			SRS / SIM / MRS / ACSM	CDV
			CVM / CTM	CDV
			DWA	CDV
			SHD	CDV
			IKE / KOM / KOMBI	CDV
			PDC	CDV
			RAD	CDV
			LSZ / LCM	CDV
			IHKA / IHKR	CDV
			GR	CDV
			MID	CDV
			ADS	CDV
			AHK	CDV
			EKM	CDV
			EML	CDV
			FHK	CDV
			GSA	CDV
URS	CDV			
VMX	CDV			
VNC	CDV			
XEN	CDV			
SPM / SM	CDV			
2000-2006	E46	Drive	EWS	CDV
			DME / DDE	CDV
			EGS / SMG	CDV
Chassis	ABS / ACS / DSC	CDV		
	RDC	CDV		
	LEW	CDV		
Body	ZKE	CDV		
	SRS / SIM / MRS / ACSM	CDV		
	CVM / CTM	CDV		
	TCU / ULF / Tel	CDV		
	SHD	CDV		
	MFL	CDV		
	IKE / KOM / KOMBI	CDV		
	PDC	CDV		
	SZM / BZM	CDV		
	RAD	CDV		
	LSZ / LCM	CDV		
	SMF	CDV		
	IHKA / IHKR	CDV		
	GR	CDV		
	BIT	CDV		
AIC	CDV			

**BMW V11.40** Diagnostics List (Note: For reference on

3 Series	2004-2011	E90/E91/E92/E93	Drive	BM	CDV
				URS	CDV
				SMB	CDV
				SPMBT	CDV
				SPMFT	CDV
			Chassis	CAS / FEM	CDV
				DME / DDE	CDV
				EGS / SMG	CDV
				VTG / LMV	CDV
				EKPS	CDV
				GWS	CDV
				ABS / ACS / DSC	CDV
				AL / AFS / ASA	CDV
				LDM	CDV
				RDC	CDV
				ACC / FRR / LRR	CDV
				ARS	CDV
				EMF	CDV
				EHC	CDV
				VDM	CDV
			EDCSVL	CDV	
			EDCSVR	CDV	
			EDCSHL	CDV	
			EDCSHR	CDV	
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				RSE	CDV
				CA	CDV
				DVDC / MMC	CDV
				TCU / ULF / Tel	CDV
				AMP / AMPH / AMPT	CDV
				KHI / KHM	CDV
				NAV	CDV
				CDC	CDV
				HUD	CDV
				CCC-ASK	CDV
				DWA	CDV
				RLS / RLSS	CDV
				ANT	CDV
				VSW	CDV
				VM	CDV
				SINE	CDV
IBOC	CDV				
SDARS	CDV				
ULF-SBX-H	CDV				
FZD	CDV				
DAB	CDV				
FLA	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

				<b>INSTR</b>	CDV
				<b>PDC</b>	CDV
				<b>CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW</b>	CDV
				<b>CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO</b>	CDV
				<b>CON / ZBE</b>	CDV
				<b>HKL / HKFM</b>	CDV
				<b>SMFA</b>	CDV
				<b>SMBF</b>	CDV
				<b>LM</b>	CDV
				<b>AHM</b>	CDV
				<b>FRM</b>	CDV
				<b>CID</b>	CDV
				<b>FD</b>	CDV
				<b>RFK</b>	CDV
				<b>IHKA / IHKR</b>	CDV
				<b>FKA</b>	CDV
				<b>CCC-A</b>	CDV
			Drive	<b>CAS / FEM</b>	CDV
				<b>DME / DDE</b>	CDV
				<b>DME2</b>	CDV
				<b>EGS / SMG</b>	CDV
				<b>EKPS</b>	CDV
				<b>GWS</b>	CDV
			Chassis	<b>ABS / ACS / DSC</b>	CDV
				<b>ICM</b>	CDV
				<b>EMF</b>	CDV
				<b>EPS</b>	CDV
				<b>ICMV</b>	CDV
				<b>SGM-ZGM / KGM / JBE /</b>	CDV
				<b>SRS / SIM / MRS / ACSM</b>	CDV
				<b>SZL</b>	CDV
				<b>TRSV</b>	CDV
				<b>AMP / AMPH / AMPT</b>	CDV
				<b>FZD</b>	CDV
				<b>KAFAS</b>	CDV
				<b>FLA</b>	CDV
				<b>INSTR</b>	CDV
				<b>PDC</b>	CDV
				<b>CBX-ECALL</b>	CDV
				<b>CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO</b>	CDV
				<b>CON / ZBE</b>	CDV
				<b>SMFAH</b>	CDV
				<b>SMBFH</b>	CDV
2012-	F30/F31/F35				

**BMW V11.40** Diagnostics List (Note: For reference on

			Body	<b>HKL / HKFM</b>	CDV				
				<b>SMFA</b>	CDV				
				<b>SMBF</b>	CDV				
				<b>AHM</b>	CDV				
				<b>FRM</b>	CDV				
				<b>CID</b>	CDV				
				<b>FD</b>	CDV				
				<b>VDC</b>	CDV				
				<b>IHKA / IHKR</b>	CDV				
				<b>FKA</b>	CDV				
				<b>PMA</b>	CDV				
				<b>ZGW</b>	CDV				
				<b>ASD</b>	CDV				
				<b>TBX</b>	CDV				
				<b>STML</b>	CDV				
				<b>STMR</b>	CDV				
				<b>LHML</b>	CDV				
				<b>LHMR</b>	CDV				
				<b>GZAL</b>	CDV				
				<b>GZAR</b>	CDV				
				<b>PCU</b>	CDV				
				Drive				<b>CAS / FEM</b>	CDV
								<b>DME / DDE</b>	CDV
								<b>DME2</b>	CDV
								<b>EGS / SMG</b>	CDV
								<b>EKPS</b>	CDV
								<b>GWS</b>	CDV
Chassis								<b>ABS / ACS / DSC</b>	CDV
								<b>ICM</b>	CDV
								<b>EMF</b>	CDV
								<b>EPS</b>	CDV
				<b>ICMV</b>	CDV				
				<b>SGM-ZGM / KGM / JBE /</b>	CDV				
				<b>SRS / SIM / MRS / ACSM</b>	CDV				
				<b>SZL</b>	CDV				
				<b>TRSV</b>	CDV				
				<b>AMP / AMPH / AMPT</b>	CDV				
				<b>FZD</b>	CDV				
				<b>KAFAS</b>	CDV				
				<b>FLA</b>	CDV				
				<b>IKE / KOM / KOMBI</b>	CDV				
				<b>PDC</b>	CDV				
				<b>CBX-ECALL</b>	CDV				
				<b>CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO</b>	CDV				
<b>CON / ZBE</b>	CDV								
<b>SMFAH</b>	CDV								
4 Series	2013 -	F32/F33/F36/F82							

**BMW V11.40** Diagnostics List (Note: For reference on

			Body	<b>SMBFH</b>	CDV	
					<b>SMFA</b>	CDV
					<b>SMBF</b>	CDV
					<b>AHM</b>	CDV
					<b>FRM</b>	CDV
					<b>CID</b>	CDV
					<b>FD</b>	CDV
					<b>VDC</b>	CDV
					<b>IHKA / IHKR</b>	CDV
					<b>FKA</b>	CDV
					<b>PMA</b>	CDV
					<b>ZGW</b>	CDV
					<b>ASD</b>	CDV
					<b>TBX</b>	CDV
					<b>STML</b>	CDV
					<b>STMR</b>	CDV
					<b>LHML</b>	CDV
				<b>LHMR</b>	CDV	
				<b>GZAL</b>	CDV	
				<b>GZAR</b>	CDV	
			Drive	<b>EWS</b>	CDV	
				<b>DME / DDE</b>	CDV	
				<b>EGS / SMG</b>	CDV	
			Chassis	<b>ABS / ACS / DSC</b>	CDV	
				<b>EHC</b>	CDV	
				<b>LEW</b>	CDV	
				<b>ZKE</b>	CDV	
				<b>SRS / SIM / MRS / ACSM</b>	CDV	
				<b>NAV</b>	CDV	
				<b>SHD</b>	CDV	
				<b>MFL</b>	CDV	
				<b>IKE / KOM / KOMBI</b>	CDV	
				<b>PDC</b>	CDV	
				<b>SZM / BZM</b>	CDV	
				<b>RAD</b>	CDV	
				<b>DSP</b>	CDV	
				<b>STH</b>	CDV	
			Body	<b>LSZ / LCM</b>	CDV	
				<b>IHKA / IHKR</b>	CDV	
				<b>GR</b>	CDV	
				<b>SES</b>	CDV	
				<b>MID</b>	CDV	
				<b>BIT</b>	CDV	
				<b>AIC</b>	CDV	
				<b>VID</b>	CDV	
				<b>BM</b>	CDV	
				<b>LRA</b>	CDV	
	2000-2003	E39				



**BMW V11.40** Diagnostics List (Note: For reference on

				<b>SPM / SM</b>	CDV
				<b>CAS / FEM</b>	CDV
			Drive	<b>DME / DDE</b>	CDV
				<b>EGS / SMG</b>	CDV
				<b>EKPS</b>	CDV
				<b>GWS</b>	CDV
				<b>ABS / ACS / DSC</b>	CDV
			Chassis	<b>AL / AFS / ASA</b>	CDV
				<b>LDM</b>	CDV
				<b>RDC</b>	CDV
				<b>ACC / FRR / LRR</b>	CDV
				<b>ARS</b>	CDV
				<b>EHC</b>	CDV
				<b>EDC / VDC</b>	CDV
			Body	<b>SGM-ZGM / KGM / JBE /</b>	CDV
				<b>SRS / SIM / MRS / ACSM</b>	CDV
				<b>SZL</b>	CDV
				<b>TMFA</b>	CDV
				<b>TMBF</b>	CDV
				<b>SBSL</b>	CDV
				<b>SBSR</b>	CDV
				<b>SFZ</b>	CDV
				<b>AHL</b>	CDV
				<b>CVM / CTM</b>	CDV
				<b>CA</b>	CDV
				<b>DVDC / MMC</b>	CDV
				<b>SVS</b>	CDV
				<b>TCU / ULF / Tel</b>	CDV
				<b>AMP / AMPH / AMPT</b>	CDV
				<b>KHI / KHM</b>	CDV
				<b>NAV</b>	CDV
				<b>CDC</b>	CDV
				<b>HUD</b>	CDV
				<b>CCC-ASK</b>	CDV
				<b>DWA</b>	CDV
				<b>PM / MPM</b>	CDV
				<b>SHD</b>	CDV
				<b>RLS / RLSS</b>	CDV
				<b>ANT</b>	CDV
				<b>VM</b>	CDV
				<b>SINE</b>	CDV
				<b>SDARS</b>	CDV
				<b>ULF-SBX-H</b>	CDV
				<b>NVE / NIVI</b>	CDV
			<b>ALBFA</b>	CDV	
			<b>ALBBF</b>	CDV	
			<b>DAB</b>	CDV	
			<b>TLC</b>	CDV	

2004-2010

E60/E61

**BMW V11.40** Diagnostics List (Note: For reference on

5 Series			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV
			SZM / BZM	CDV
			CON / ZBE	CDV
			HKL / HKFM	CDV
			SMFA	CDV
			SMBF	CDV
			LM	CDV
			AHM	CDV
			KBM	CDV
			CID	CDV
			IHKA / IHKR	CDV
	SHZH	CDV		
	NVK	CDV		
	CCC-A	CDV		
	Drive	CAS / FEM	CDV	
		DME / DDE	CDV	
		DME2	CDV	
		EGS / SMG	CDV	
		VTG / LMV	CDV	
		EKPS	CDV	
		GWS	CDV	
		EME	CDV	
		Chassis	ABS / ACS / DSC	CDV
			AL / AFS / ASA	CDV
			ICM	CDV
			RDC	CDV
	EMF		CDV	
	EPS		CDV	
	EHC		CDV	
ICMV	CDV			
EDCSVL	CDV			
EDCSVR	CDV			
EDCSHL	CDV			
EDCSHR	CDV			
HSR	CDV			
SME	CDV			
	SGM-ZGM / KGM / JBE /	CDV		
	SRS / SIM / MRS / ACSM	CDV		
	SZL	CDV		
	TR SVC	CDV		
	HC / SWW	CDV		

**BMW V11.40** Diagnostics List (Note: For reference on

2009-	GT(F07)	Body	SVT	
			RSE	CDV
			DVDC / MMC	CDV
			TCU / ULF / Tel	CDV
			AMP / AMPH / AMPT	CDV
			HUD	CDV
			VSW	CDV
			VM	CDV
			SEC	CDV
			EMALI	CDV
			EMARE	CDV
			FZD	CDV
			NVE / NIVI	CDV
			KAFAS	CDV
			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			FCON / ZBEF	CDV
			SMFAH	CDV
			SMBFH	CDV
			HKL / HKFM	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
			RFK	CDV
			IHKA / IHKR	CDV
			FKA	CDV
			ZGW	CDV
CAS / FEM	CDV			
DME / DDE	CDV			
DME2	CDV			
EGS / SMG	CDV			
VTG / LMV	CDV			
EKPS	CDV			
GWS	CDV			
EME	CDV			
ABS / ACS / DSC	CDV			
AL / AFS / ASA	CDV			
ICM	CDV			
RDC	CDV			
EMF	CDV			

**BMW V11.40** Diagnostics List (Note: For reference on

2009-	F10/F11/F18	Chassis	EPS	CDV
			EHC	CDV
			ICMV	CDV
			EDCSVL	CDV
			EDCSVR	CDV
			EDCSHL	CDV
			EDCSHR	CDV
			HSR	CDV
			SME	CDV
			SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SZL	CDV
			TR SVC	CDV
			HC / SWW	CDV
		SVT	CDV	
		GHAS	CDV	
		RSE	CDV	
		DVDC / MMC	CDV	
		TCU / ULF / Tel	CDV	
		AMP / AMPH / AMPT	CDV	
		EME2	CDV	
		HUD	CDV	
		VSW	CDV	
		VM	CDV	
		SEC	CDV	
		EMALI	CDV	
		EMARE	CDV	
		FZD	CDV	
		NVE / NIVI	CDV	
		KAFAS	CDV	
		FLA	CDV	
		INSTR	CDV	
		PDC	CDV	
		CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV	
CON / ZBE	CDV			
FCON / ZBEF	CDV			
SMFAH	CDV			
SMBFH	CDV			
HKL / HKFM	CDV			
SMFA	CDV			
SMBF	CDV			
AHM	CDV			
FRM	CDV			
CID	CDV			
FD	CDV			
RFK	CDV			
		Body		

**BMW V11.40** Diagnostics List (Note: For reference on

				IHKA / IHKR	CDV
				FKA	CDV
				PMA	CDV
				ZGW	CDV
				ASD	CDV
				TBX	CDV
				STML	CDV
				STMR	CDV
				LHML	CDV
				LHMR	CDV
				GZAL	CDV
				SMES1	CDV
				SMES2	CDV
			Drive	CAS / FEM	CDV
				DME / DDE	CDV
				EGS / SMG	CDV
				EKPS	CDV
				GWS	CDV
			Chassis	ABS / ACS / DSC	CDV
				AL / AFS / ASA	CDV
				LDM	CDV
				RDC	CDV
				ACC / FRR / LRR	CDV
				ARS	CDV
				EHC	CDV
			EDC / VDC	CDV	
				SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TMFA	CDV
				TMBF	CDV
				SBSL	CDV
				SBSR	CDV
				SFZ	CDV
				AHL	CDV
				CVM / CTM	CDV
				CA	CDV
				DVDC / MMC	CDV
				SVS	CDV
				TCU / ULF / Tel	CDV
				AMP / AMPH / AMPT	CDV
				KHI / KHM	CDV
				NAV	CDV
				CDC	CDV
				HUD	CDV
				CCC-ASK	CDV
			DWA	CDV	
			PM / MPM	CDV	
2004-2010		E63/E64			

**BMW V11.40** Diagnostics List (Note: For reference on

6 Series			Body	SHD	CDV	
				RLS / RLSS	CDV	
				ANT	CDV	
				VM	CDV	
				SINE	CDV	
				SDARS	CDV	
				ULF-SBX-H	CDV	
				NVE / NIVI	CDV	
				ALBFA	CDV	
				ALBBF	CDV	
				DAB	CDV	
				TLC	CDV	
				FLA	CDV	
				INSTR	CDV	
				PDC	CDV	
				CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV	
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV	
				SZM / BZM	CDV	
				CON / ZBE	CDV	
				HKL / HKFM	CDV	
				SMFA	CDV	
				SMBF	CDV	
				LM	CDV	
				AHM	CDV	
				KBM	CDV	
				CID	CDV	
				IHKA / IHKR	CDV	
				SHZH	CDV	
				NVK	CDV	
				CCC-A	CDV	
				Drive	CAS / FEM	CDV
					DME / DDE	CDV
					DME2	CDV
EGS / SMG	CDV					
VTG / LMV	CDV					
EKPS	CDV					
GWS	CDV					
EME	CDV					
Chassis	ABS / ACS / DSC	CDV				
	AL / AFS / ASA	CDV				
	ICM	CDV				
	RDC	CDV				
	EMF	CDV				
	EPS	CDV				
	EHC	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

2010-	F12/F13	Chassis	ICMV	CDV
			EDCSVL	CDV
			EDCSVR	CDV
			EDCSHL	CDV
			EDCSHR	CDV
			HSR	CDV
			SME	CDV
			SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SZL	CDV
			TR SVC	CDV
			HC / SWW	CDV
			SVT	CDV
			GHAS	CDV
			RSE	CDV
			DVDC / MMC	CDV
			TCU / ULF / Tel	CDV
			AMP / AMPH / AMPT	CDV
		EME2	CDV	
		HUD	CDV	
		VSW	CDV	
		VM	CDV	
		SEC	CDV	
		EMALI	CDV	
		EMARE	CDV	
		CANSIN	CDV	
		FZD	CDV	
		NVE / NIVI	CDV	
		KAFAS	CDV	
		FLA	CDV	
		INSTR	CDV	
		PDC	CDV	
		CBX-ECALL	CDV	
		Body	CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			FCON / ZBEF	CDV
	SMFAH	CDV		
	SMBFH	CDV		
	HKL / HKFM	CDV		
	SMFA	CDV		
	SMBF	CDV		
	AHM	CDV		
	FRM	CDV		
	CID	CDV		
	FD	CDV		
	RFK	CDV		

**BMW V11.40** Diagnostics List (Note: For reference on

				IHKA / IHKR	CDV
				FKA	CDV
				PMA	CDV
				ZGW	CDV
				ASD	CDV
				TBX	CDV
				STML	CDV
				STMR	CDV
				LHML	CDV
				LHMR	CDV
				GZAL	CDV
				GZAR	CDV
			Drive	EWS	CDV
				DME / DDE	CDV
				EGS / SMG	CDV
			Chassis	ABS / ACS / DSC	CDV
				EHC	CDV
				LEW	CDV
				ZKE	CDV
				SRS / SIM / MRS / ACSM	CDV
				NAV	CDV
				SHD	CDV
				MFL	CDV
				IKE / KOM / KOMBI	CDV
				PDC	CDV
				SZM / BZM	CDV
				RAD	CDV
				DSP	CDV
				STH	CDV
			Body	LSZ / LCM	CDV
				SMF	CDV
				IHKA / IHKR	CDV
				GR	CDV
				SES	CDV
				MID	CDV
				BIT	CDV
				AIC	CDV
				VID	CDV
				BM	CDV
				EML	CDV
				SPM / SM	CDV
				CAS / FEM	CDV
			Drive	DME / DDE	CDV
				DME2	CDV
				EGS / SMG	CDV
				EKPS	CDV
				VTC	CDV
				VTC2	CDV



**BMW V11.40** Diagnostics List (Note: For reference on

2002-2008	E65/E66	Chassis	ABS / ACS / DSC	CDV
			RDC	CDV
			ACC / FRR / LRR	CDV
			ARS	CDV
			EMF	CDV
			EHC	CDV
			EDC / VDC	CDV
			CIM	CDV
			SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SASL	CDV
			SASR	CDV
			STVL / CDM	CDV
			STVR	CDV
		SSFA	CDV	
		SSBF	CDV	
		SBSL	CDV	
		SBSR	CDV	
		SSH / HKFM	CDV	
		SFZ	CDV	
		CEM	CDV	
		AHL	CDV	
		CA	CDV	
		DVDC / MMC	CDV	
		SG-FD-GW	CDV	
		SG-FD	CDV	
		SVS	CDV	
		TCU / ULF / Tel	CDV	
		AMP / AMPH / AMPT	CDV	
		KHI / KHM	CDV	
		NAV	CDV	
		CDC	CDV	
CCC-ASK	CDV			
DWA	CDV			
PM / MPM	CDV			
SHD	CDV			
RLS / RLSS	CDV			
WIM	CDV			
ANT	CDV			
VM	CDV			
SEC	CDV			
TMFAT	CDV			
TMBFT	CDV			
TMFAH	CDV			
TMBFH	CDV			
SINE	CDV			
IBOC	CDV			
SDARS	CDV			
		Body		

**BMW V11.40** Diagnostics List (Note: For reference on

7 Series				NVE / NIVI	CDV				
				DAB	CDV				
				FLA	CDV				
				INSTR	CDV				
				PDC	CDV				
				FBI	CDV				
				CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV				
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV				
				SZM / BZM	CDV				
				FBZM	CDV				
				CON / ZBE	CDV				
				FCON / ZBEF	CDV				
				SMFAH	CDV				
				SMBFH	CDV				
				HKL / HKFM	CDV				
				SMFA	CDV				
				SMBF	CDV				
				LM	CDV				
				AHM	CDV				
				FD	CDV				
				IHKA / IHKR	CDV				
				FKA	CDV				
				SHZH	CDV				
				NVK	CDV				
				Drive				CAS / FEM	CDV
								DME / DDE	CDV
DME2	CDV								
EGS / SMG	CDV								
VTG / LMV	CDV								
EKPS	CDV								
GWS	CDV								
EME	CDV								
Chassis								ABS / ACS / DSC	CDV
								AL / AFS / ASA	CDV
				LDM					
				ICM	CDV				
				RDC	CDV				
				EMF	CDV				
				EPS	CDV				
				EHC	CDV				
				ICMV	CDV				
				EDCSVL	CDV				
EDCSVR	CDV								
EDCSHL	CDV								
EDCSHR	CDV								

**BMW V11.40** Diagnostics List (Note: For reference on

				HSR	CDV
				SME	CDV
				SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TR SVC	CDV
				HC / SWW	CDV
				SVT	CDV
				RSE	CDV
				DVDC / MMC	CDV
				TCU / ULF / Tel	CDV
				AMP / AMPH / AMPT	CDV
				HUD	CDV
				VSW	CDV
				VM	CDV
				SEC	CDV
				EMALI	CDV
				EMARE	CDV
				FZD	CDV
				NVE / NIVI	CDV
				KAFAS	CDV
				FLA	CDV
				INSTR	CDV
				IKE / KOM / KOMBI	CDV
				PDC	CDV
			Body	CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
				CON / ZBE	CDV
				FCON / ZBEF	CDV
				SMFAH	CDV
				SMBFH	CDV
				HKL / HKFM	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				RFK	CDV
				HKA	CDV
				IHKA / IHKR	CDV
				FKA	CDV
				PMA	CDV
				ZGW	CDV
				TBX	CDV
				STML	CDV
				STMR	CDV

2008-

F01/F01/F03/F04

**BMW V11.40** Diagnostics List (Note: For reference on

				LHML	CDV
				LHMR	CDV
				GZAL	CDV
				GZAR	CDV
			Drive	CAS / FEM	CDV
				DME / DDE	CDV
				EGS / SMG	CDV
				EKPS	CDV
				GWS	CDV
				Chassis	ABS / ACS / DSC
			RDC		CDV
			ACC / FRR / LRR		CDV
			EPS		CDV
			EHC		CDV
			EDC / VDC		CDV
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				CVM / CTM	CDV
				CA	CDV
				DVDC / MMC	CDV
				TCU / ULF / Tel	CDV
				AMP / AMPH / AMPT	CDV
				NAV	CDV
				CDC	CDV
				CCC-ASK	
				DWA	CDV
				RLS / RLSS	CDV
				VM	CDV
				SINE	CDV
				ULF-SBX-H	CDV
				FZD	CDV
				DAB	CDV
				FLA	CDV
				INSTR	CDV
				PDC	CDV
				CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV
				CON / ZBE	CDV
				SMFA	CDV
				SMBF	CDV
				LM	
				FRM	CDV
				CID	CDV
				IHKA / IHKR	CDV
				EWS	CDV

**BMW V11.40** Diagnostics List (Note: For reference on

2003-2010	X3-E83	Drive	DME / DDE	CDV
			EGS / SMG	CDV
			VTG / LMV	CDV
			EKPS	CDV
		Chassis	ABS / ACS / DSC	CDV
			LEW	CDV
		Body	ZKE	CDV
			SRS / SIM / MRS / ACSM	CDV
			NAV	CDV
			SHD	CDV
			MFL	CDV
			IKE / KOM / KOMBI	CDV
			PDC	CDV
			RAD	CDV
			DSP	CDV
			LSZ / LCM	CDV
			SMF	CDV
			CID	CDV
			IHKA / IHKR	CDV
			BIT	CDV
AIC	CDV			
VID	CDV			
Drive	CAS / FEM	CDV		
	DME / DDE	CDV		
	DME2	CDV		
	EGS / SMG	CDV		
	VTG / LMV	CDV		
	EKPS	CDV		
	GWS	CDV		
	EME	CDV		
	Chassis	ABS / ACS / DSC	CDV	
		AL / AFS / ASA	CDV	
LDM		CDV		
ICM		CDV		
RDC		CDV		
EMF		CDV		
EPS		CDV		
EHC		CDV		
ICMV		CDV		
VDM		CDV		
EDCSVL		CDV		
EDCSVR		CDV		
EDCSHL		CDV		
EDCSHR		CDV		
HSR	CDV			
SME	CDV			
	SGM-ZGM / KGM / JBE /	CDV		
	SRS / SIM / MRS / ACSM	CDV		

**BMW V11.40** Diagnostics List (Note: For reference on

2010-	X3-F25	Body	SZL	CDV
			TR SVC	CDV
			HC / SWW	CDV
			RSE	CDV
			DVDC / MMC	CDV
			TCU / ULF / Tel	CDV
			AMP / AMPH / AMPT	CDV
			HUD	CDV
			VSW	CDV
			VM	CDV
			SEC	CDV
			EMALI	CDV
			EMARE	CDV
			FZD	CDV
			NVE / NIVI	CDV
			KAFAS	CDV
			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			FCON / ZBEF	CDV
			SMFAH	CDV
			SMBFH	CDV
			HKL / HKFM	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
			VDC	CDV
			RFK	CDV
IHKA / IHKR	CDV			
FKA	CDV			
ZGW	CDV			
ASD	CDV			
TBX	CDV			
STML	CDV			
STMR	CDV			
LHML	CDV			
LHMR	CDV			
GZAL	CDV			
GZAR	CDV			
EWS	CDV			
DME / DDE	CDV			
		Drive		

**BMW V11.40** Diagnostics List (Note: For reference on

2000-2006	X5-E53	Chassis	EGS / SMG	CDV
			ABS / ACS / DSC	CDV
			RDC	CDV
			EHC	CDV
		Body	LEW	CDV
			ZKE	CDV
			SRS / SIM / MRS / ACSM	CDV
			NAV	CDV
			SHD	CDV
			MFL	CDV
			IKE / KOM / KOMBI	CDV
			PDC	CDV
			SZM / BZM	CDV
			RAD	CDV
			DSP	CDV
			STH	CDV
			LSZ / LCM	CDV
			SMF	CDV
			IHKA / IHKR	CDV
			GR	CDV
			SES	CDV
			BIT	CDV
			AIC	CDV
			VID	CDV
		BM	CDV	
		Drive	SPM / SM	CDV
			CAS / FEM	CDV
			DME / DDE	CDV
EGS / SMG	CDV			
VTG / LMV	CDV			
EKPS	CDV			
VTC	CDV			
VTC2	CDV			
GWS	CDV			
QMVH	CDV			
Chassis	ABS / ACS / DSC	CDV		
	AL / AFS / ASA	CDV		
	RDC	CDV		
	ARS	CDV		
	EMF	CDV		
	EHC	CDV		
	VDM	CDV		
	EDCSVL	CDV		
	EDCSVR	CDV		
	EDCSHL	CDV		
EDCSHR	CDV			
	SGM-ZGM / KGM / JBE /	CDV		
	SRS / SIM / MRS / ACSM	CDV		

**BMW V11.40** Diagnostics List (Note: For reference on

2007-	X5-E70	Body	RSE	CDV
			CA	CDV
			DVDC / MMC	CDV
			TCU / ULF / Tel	CDV
			AMP / AMPH / AMPT	CDV
			KHI / KHM	CDV
			NAV	CDV
			CDC	CDV
			HUD	CDV
			CCC-ASK	CDV
			RLS / RLSS	CDV
			ANT	CDV
			VSW	CDV
			VM	CDV
			SINE	CDV
			IBOC	CDV
			SDARS	CDV
			ULF-SBX-H	CDV
			FZD	CDV
			DAB	CDV
			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV
			CON / ZBE	CDV
			HKL / HKFM	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
RFK	CDV			
IHKA / IHKR	CDV			
FKA	CDV			
CCC-A	CDV			
Drive	CAS / FEM	CDV		
	DME / DDE	CDV		
	DME2	CDV		
	EGS / SMG	CDV		
	EKPS	CDV		
	QMVH	CDV		
	GWS	CDV		
ABS / ACS / DSC	CDV			



**BMW V11.40** Diagnostics List (Note: For reference on

X Series	2013-	X4-F26	Chassis	ICM	CDV
				EMF	CDV
				EPS	CDV
				ICMV	CDV
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TR SVC	CDV
				AMP / AMPH / AMPT	CDV
				FZD	CDV
				KAFAS	CDV
				FLA	CDV
				INSTR	CDV
				IKE / KOM / KOMBI	CDV
				PDC	CDV
				CBX-ECALL	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
				CON / ZBE	CDV
				SMFAH	CDV
				SMBFH	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				VDC	CDV
	IHKA / IHKR	CDV			
	FKA	CDV			
	PMA	CDV			
	ZGW	CDV			
	ASD	CDV			
	TBX	CDV			
STML	CDV				
STMR	CDV				
LHML	CDV				
LHMR	CDV				
GZAL	CDV				
GZAR	CDV				
Drive	CAS / FEM	CDV			
	DME / DDE	CDV			
	DME2	CDV			
	EGS / SMG	CDV			
	EKPS	CDV			
	QMVH	CDV			
GWS	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

2013-	X5-F15	Chassis	ABS / ACS / DSC	CDV
			ICM	CDV
			EMF	CDV
			EPS	CDV
			ICMV	CDV
		Body	SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SZL	CDV
			TR SVC	CDV
			SCR	CDV
			AMP / AMPH / AMPT	CDV
			FZD	CDV
			KAFAS	CDV
			FLA	CDV
			INSTR	CDV
			IKE / KOM / KOMBI	CDV
			PDC	CDV
			CBX-ECALL	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			SMFAH	CDV
			SMBFH	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
			VDC	CDV
			IHKA / IHKR	CDV
			FKA	CDV
			PMA	CDV
			ZGW	CDV
ASD	CDV			
TBX	CDV			
STML	CDV			
STMR	CDV			
LHML	CDV			
LHMR	CDV			
GZAL	CDV			
GZAR	CDV			
Drive	CAS / FEM	CDV		
	DME / DDE	CDV		
	DME2	CDV		
	EGS / SMG	CDV		
	EKPS	CDV		

**BMW V11.40** Diagnostics List (Note: For reference on

2013-	X6-F16	Chassis	QMVH	CDV
			GWS	CDV
			ABS / ACS / DSC	CDV
			ICM	CDV
			EMF	CDV
			EPS	CDV
			ICMV	CDV
		Body	SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SZL	CDV
			TR SVC	CDV
			AMP / AMPH / AMPT	CDV
			FZD	CDV
			KAFAS	CDV
			FLA	CDV
			INSTR	CDV
			IKE / KOM / KOMBI	CDV
			PDC	CDV
			CBX-ECALL	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			SMFAH	CDV
			SMBFH	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
			VDC	CDV
			IHKA / IHKR	CDV
			FKA	CDV
			PMA	CDV
ZGW	CDV			
ASD	CDV			
TBX	CDV			
STML	CDV			
STMR	CDV			
LHML	CDV			
LHMR	CDV			
GZAL	CDV			
GZAR	CDV			
CAS / FEM	CDV			
DME / DDE	CDV			
EGS / SMG	CDV			
VTG / LMV	CDV			

**BMW V11.40** Diagnostics List (Note: For reference on

2008-	X6-E71	Drive	EKPS	CDV	
			VTC	CDV	
			VTC2	CDV	
			GWS	CDV	
			QMVH	CDV	
		Chassis	ABS / ACS / DSC	CDV	
			AL / AFS / ASA	CDV	
			RDC	CDV	
			ARS	CDV	
			EMF	CDV	
			EHC	CDV	
			VDM	CDV	
			EDCSVL	CDV	
			EDCSVR	CDV	
			EDCSHL	CDV	
			EDCSHR	CDV	
			Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
		RSE		CDV	
		CA		CDV	
		DVDC / MMC		CDV	
		TCU / ULF / Tel		CDV	
		AMP / AMPH / AMPT		CDV	
		KHI / KHM		CDV	
		NAV		CDV	
		CDC		CDV	
		HUD		CDV	
		CCC-ASK		CDV	
		RLS / RLSS		CDV	
		ANT		CDV	
		VSW		CDV	
		VM		CDV	
		SINE		CDV	
		IBOC		CDV	
		SDARS		CDV	
		ULF-SBX-H		CDV	
FZD	CDV				
DAB	CDV				
FLA	CDV				
INSTR	CDV				
PDC	CDV				
CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV				
CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV				
CON / ZBE	CDV				
HKL / HKFM	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

				<b>SMFA</b>	CDV
				<b>SMBF</b>	CDV
				<b>AHM</b>	CDV
				<b>FRM</b>	CDV
				<b>CID</b>	CDV
				<b>FD</b>	CDV
				<b>RFK</b>	CDV
				<b>IHKA / IHKR</b>	CDV
				<b>FKA</b>	CDV
				<b>CCC-A</b>	CDV
			Drive	<b>CAS / FEM</b>	CDV
				<b>DME / DDE</b>	CDV
				<b>EGS / SMG</b>	CDV
				<b>VTG / LMV</b>	CDV
				<b>EKPS</b>	CDV
				<b>VTC</b>	CDV
				<b>VTC2</b>	CDV
				<b>GWS</b>	CDV
				<b>QMVH</b>	CDV
				Chassis	<b>ABS / ACS / DSC</b>
			<b>AL / AFS / ASA</b>		CDV
			<b>RDC</b>		CDV
			<b>ARS</b>		CDV
			<b>EMF</b>		CDV
			<b>EHC</b>		CDV
			<b>VDM</b>		CDV
			<b>EDCSVL</b>		CDV
			<b>EDCSVR</b>		CDV
			<b>EDCSHL</b>		CDV
			<b>EDCSHR</b>	CDV	
				<b>SGM-ZGM / KGM / JBE /</b>	CDV
				<b>SRS / SIM / MRS / ACSM</b>	CDV
				<b>RSE</b>	CDV
				<b>CA</b>	CDV
				<b>DVDC / MMC</b>	CDV
				<b>TCU / ULF / Tel</b>	CDV
				<b>AMP / AMPH / AMPT</b>	CDV
				<b>KHI / KHM</b>	CDV
				<b>NAV</b>	CDV
				<b>CDC</b>	CDV
				<b>HUD</b>	CDV
				<b>CCC-ASK</b>	CDV
				<b>RLS / RLSS</b>	CDV
				<b>ANT</b>	CDV
				<b>VSW</b>	CDV
			<b>VM</b>	CDV	
			<b>SINE</b>	CDV	
2009-		X6-E72			

**BMW V11.40** Diagnostics List (Note: For reference on

			Body	IBOC	CDV
				SDARS	CDV
				ULF-SBX-H	CDV
				FZD	CDV
				DAB	CDV
				FLA	CDV
				INSTR	CDV
				PDC	CDV
				CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV
				CON / ZBE	CDV
				HKL / HKFM	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				RFK	CDV
				IHKA / IHKR	CDV
			FKA	CDV	
			CCC-A	CDV	
2000-2002	Z3-E36	Drive	EWS	CDV	
			DME / DDE	CDV	
			EGS / SMG	CDV	
		Chassis	ABS / ACS / DSC	CDV	
			EHC	CDV	
		Body	ZKE	CDV	
			SRS / SIM / MRS / ACSM	CDV	
			CVM / CTM	CDV	
			DWA	CDV	
			SHD	CDV	
			IKE / KOM / KOMBI	CDV	
			PDC	CDV	
			RAD	CDV	
			LSZ / LCM	CDV	
			IHKA / IHKR	CDV	
			GR	CDV	
			MID	CDV	
			ADS	CDV	
			AHK	CDV	
			EKM	CDV	
EML	CDV				
FHK	CDV				
GSA	CDV				

**BMW V11.40** Diagnostics List (Note: For reference on

Z Series	2000-2003	Z8-E52	Drive	URS	CDV
				VMX	CDV
				VNC	CDV
				XEN	CDV
			Chassis	EWS	CDV
				DME / DDE	CDV
				EGS / SMG	CDV
			Body	ABS / ACS / DSC	CDV
				RDC	CDV
				LEW	CDV
				ZKE	CDV
				SRS / SIM / MRS / ACSM	CDV
				IKE / KOM / KOMBI	CDV
			2003-2008	Z4-E85/E86	Drive
	IHKA / IHKR	CDV			
	URS	CDV			
	EWS	CDV			
	Chassis	DME / DDE			CDV
		EGS / SMG			CDV
		EKPS			CDV
		ABS / ACS / DSC			CDV
	Body	EPS			CDV
		LEW			CDV
		ZKE			CDV
		SRS / SIM / MRS / ACSM			CDV
		STVL / CDM			CDV
		STVR			CDV
		SBSL			CDV
		SBSR			CDV
		CVM / CTM			CDV
		IKE / KOM / KOMBI			CDV
		PDC	CDV		
SZM / BZM		CDV			
RAD		CDV			
DSP		CDV			
LSZ / LCM	CDV				
SMF	CDV				
CID	CDV				
IHKA / IHKR	CDV				
NAJ	CDV				
BIT	CDV				
AIC	CDV				
VID	CDV				
Drive	CAS / FEM	CDV			
	DME / DDE	CDV			
	EGS / SMG	CDV			
	EKPS	CDV			
	GWS	CDV			

**BMW V11.40** Diagnostics List (Note: For reference on

2009-	Z4-E89	Chassis	ABS / ACS / DSC	CDV
			RDC	CDV
			ACC / FRR / LRR	CDV
			EMF	CDV
			EPS	CDV
			EDC / VDC	CDV
		Body	SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			CVM / CTM	CDV
			CA	CDV
			DVDC / MMC	CDV
			TCU / ULF / Tel	CDV
			AMP / AMPH / AMPT	CDV
			NAV	CDV
			CDC	CDV
			CCC-ASK	CDV
			DWA	CDV
			RLS / RLSS	CDV
			VM	CDV
			SINE	CDV
			ULF-SBX-H	CDV
			FZD	CDV
			DAB	CDV
			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO	CDV
			CON / ZBE	CDV
			SMFA	CDV
			LM	
			FRM	CDV
CID	CDV			
IHKA / IHKR	CDV			
Drive	CAS / FEM	CDV		
	DME / DDE	CDV		
	DME2	CDV		
	EGS / SMG	CDV		
	EKPS	CDV		
	GWS	CDV		
Chassis	ABS / ACS / DSC	CDV		
	ICM	CDV		
	EMF	CDV		
	EPS	CDV		
	ICMV	CDV		



**BMW V11.40** Diagnostics List (Note: For reference on

I Series	2013 -	I01/I12	Body	SGM-ZGM / KGM / JBE /	CDV
				SRS / SIM / MRS / ACSM	CDV
				SZL	CDV
				TR SVC	CDV
				AMP / AMPH / AMPT	CDV
				FZD	CDV
				KAFAS	CDV
				FLA	CDV
				IKE / KOM / KOMBI	CDV
				PDC	CDV
				CBX-ECALL	CDV
				CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
				CON / ZBE	CDV
				SMFAH	CDV
				SMBFH	CDV
				SMFA	CDV
				SMBF	CDV
				AHM	CDV
				FRM	CDV
				CID	CDV
				FD	CDV
				VDC	CDV
				IHKA / IHKR	CDV
				FKA	CDV
				PMA	CDV
				ZGW	CDV
				ASD	CDV
				TBX	CDV
				STML	CDV
				STMR	CDV
LHML	CDV				
LHMR	CDV				
GZAL	CDV				
GZAR	CDV				
Drive	EWS	CDV			
	DME / DDE	CDV			
	EGS / SMG	CDV			
Chassis	ABS / ACS / DSC	CDV			
	RDC	CDV			
	EHPS	CDV			
	LEW	CDV			
	ZKE	CDV			
	SRS / SIM / MRS / ACSM	CDV			
	STVL / CDM	CDV			
	STVR	CDV			
	CVM / CTM	CDV			
2000-2008	R50/R52/R53				

**BMW V11.40** Diagnostics List (Note: For reference on

MINI			Body	SHD	CDV	
				IKE / KOM / KOMBI	CDV	
				PDC	CDV	
				RAD	CDV	
				LSZ / LCM	CDV	
				IHKA / IHKR	CDV	
				AIC	CDV	
				BM	CDV	
				URS	CDV	
	Drive	2006-	R55/R56/R57/R58 /R59/R60/R61	Drive	CAS / FEM	CDV
					DME / DDE	CDV
					EGS / SMG	CDV
	Chassis			ABS / ACS / DSC	CDV	
					RDC	CDV
	Body			SGM-ZGM / KGM / JBE /	CDV	
				SRS / SIM / MRS / ACSM	CDV	
				SZL	CDV	
				CVM / CTM	CDV	
		CA	CDV			
		AMP / AMPH / AMPT	CDV			
		NAV	CDV			
		CDC	CDV			
		CCC-ASK	CDV			
		SHD	CDV			
		ANT	CDV			
		VM	CDV			
		IBOC	CDV			
		SDARS	CDV			
		ULF-SBX-H	CDV			
		DAB	CDV			
		INSTR	CDV			
		PDC	CDV			
		CD-GW / M-ASK-GW / CCC-GW / CHAMP-GW / RAD2-GW / CIC-GW	CDV			
CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC-BO		CDV				
AHM		CDV				
FRM	CDV					
CID	CDV					
IHKA / IHKR	CDV					
CCC-A	CDV					
Drive			Drive		CDV	
				DME / DDE	CDV	
				DME2	CDV	
				EGS / SMG	CDV	
				EKPS	CDV	
				GWS	CDV	

**BMW V11.40** Diagnostics List (Note: For reference on

2014 -	F56	Chassis	ABS / ACS / DSC	CDV
			ICM	CDV
			EMF	CDV
			EPS	CDV
			ICMV	CDV
		Body	SGM-ZGM / KGM / JBE /	CDV
			SRS / SIM / MRS / ACSM	CDV
			SZL	CDV
			TR SVC	CDV
			AMP / AMPH / AMPT	CDV
			FZD	CDV
			KAFAS	CDV
			FLA	CDV
			INSTR	CDV
			PDC	CDV
			CBX-ECALL	CDV
			CD / M-ASK-BO / RAD / CIC / RAD2-BO / CHAMP-BO / CCC- BO	CDV
			CON / ZBE	CDV
			SMFAH	CDV
			SMBFH	CDV
			SMFA	CDV
			SMBF	CDV
			AHM	CDV
			FRM	CDV
			CID	CDV
			FD	CDV
			VDC	CDV
			IHKA / IHKR	CDV
			FKA	CDV
			PMA	CDV
ZGW	CDV			
ASD	CDV			
TBX	CDV			
STML	CDV			
STMR	CDV			
LHML	CDV			
LHMR	CDV			
GZAL	CDV			
GZAR	CDV			
<b>Functions Notes:</b>				
V	VERSION INFORMATION			
C	DTC			
D	DATA Stream			

**BMW V11.40** Diagnostics List (Note: For reference on

<b>RESET Function</b>					
<b>TYPE</b>	<b>YEAR</b>	<b>OIL</b>	<b>BREAK</b>	<b>SAS</b>	<b>DPF</b>
1 SERIES	2003 - 2015	✓	✓	✓	✓
2 SERIES	2013 - 2015	✓	✓	✓	✓
3 SERIES	2000 - 2015	✓	✓ (2004 - 2015)	✓	✓ (2004 - 2015)
4 SERIES	2013 - 2015	✓	✓	✓	✓
5 SERIES	2000 - 2015	✓	✓ (2004 - 2015)	✓	✓ (2004 - 2015)
6 SERIES	2004 - 2015	✓	✓	✓	✓
7 SERIES	2000 - 2015	✓	✓ (2002 - 2015)	✓	✓ (2002 - 2015)
I SERIES	2013 - 2015	✓	✓	✓	✓
X SERIES	2000 - 2015	✓	✓ (2007 - 2015)	✓	✓ (2007 - 2015)
Z SERIES	2000 - 2015	✓	✓ (2003 - 2015)	✓	✓ (2003 - 2015)